ROTTEFELLA®

NTN Freeride & Freedom Mounting Template 2012

SCARPA®

Cut Here

THE BINDING SHOULD BE MOUNTED ACCORDING TO THE SKI MANUFACTURERS INSTRUCTIONS (SKI CENTER MARK)

FRONT OF SKI

NB!

FREEDOM=BLACK

FREERIDE=MAGENTA

Holes for binding plate 6 pcs

Holes for support plate 2 pcs

Small **Large**

250 260 270 280 290 300 310 320

1 inch scale

WARNING: Print on 8.5"x11" paper.
Do Not Scale when printing. Must be printed at 100%.
Double/Triple check template scale with ruler prior to use.

1. MEASURE THE 1 INCH SCALE WITH A RULER TO ASSURE TEMPLATE IS PRINTED CORRECTLY.
2. Cut Page 1 on cut line at right edge.
3. Overlay Page 1 cut edge with left edge of Page 2 and line up where indicated.
4. Tape pages together.

****NOTE:**
For Freeride heel: Center the middle slot on the line of indicated hole.

Cut Here

ROTTEFELLA®

SCARPA®

THE BINDING SHOULD BE MOUNTED ACCORDING TO THE SKI MANUFACTURERS INSTRUCTIONS (SKI CENTER MARK)

FRONT OF SKI

225	235	245	255	265	275	285	295
230	240	250	260	270	280	290	300
(275)	(283)	(291)	(299)	(307)	(316)	(325)	(333)
1	1	2	3	4	5	6	7

SCARPA Mondo Size

Boot sole length (mm)

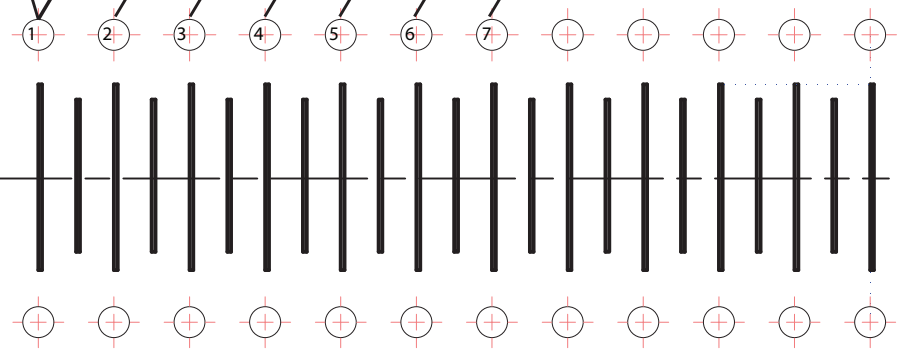

Scale for the position of the heel

NB!

Small | Large

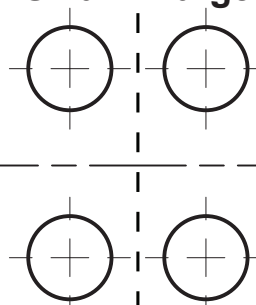

Holes for support plate 2 pcs

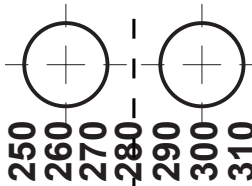

250 260 270 280 290 300 310 320 330 340 350 360

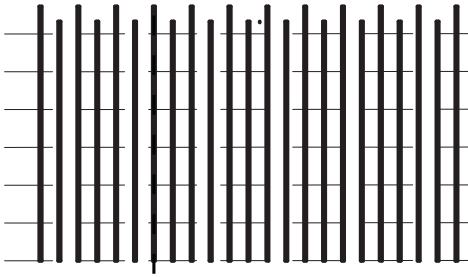

Boot sole length (mm) = Ski centermark

Scale for the position of binding plate and AT- slider

WARNING: Print on 8.5"x11" paper.
Do Not Scale when printing. Must be printed at 100%.
Double/Triple check template scale with ruler prior to use.

1 inch

Tape cut edge of Page 1 here.